

# GM1200E Pinout

1	Spkr +	
2	Mic Ext IN	
3	Ext PTT	→ PTT
4	Alarm	
5	Flat TX Audio (in data mode)	→ TX NF
6	SCS Data IN	
7	GND	→ GND
8	SCI Data OUT	
9	Emergency	
10	Ign. Detect (+12V von Zündung)	
11	Flat RX Audio (in data mode)	→ RX NF
12	CTS RX=0V, std by=5V	→ SQL
13	SW B+	
14	Hook	
15	RSSI	
16	Spkr -	

## Anschluß an BananaPi-Adapter

GM1200E		BananaPi-Adapter (RJ45)	Funktion
7	→	1 (oder/und 4,8)	GND
12	→	3	SQL
3	→	6	PTT
11	→	5	RX NF
5	→	7	TX Mod

Ohne Garantie!