

GM1200 Pinout

1	SPKR+	
2	INT SPKR+	
3	SPKR-	
4	DIGITAL GND	→ GND
5	BUSY	
6	BUS+	
7	I/O 8	
8	I/O 5	→ SQL
9	EMERGENCY	→ mit Pin 4 brücken (GND)
10	ANALOG GND	
11	FIL AUD OUT	
12	AUX RX IN2	
13	MIC IN	
14	SW B+	
15	IGNITION	
16	I/O 2	
17	LH RESET	
18	BUS-	
19	SCI RX DATA	
20	I/O 4	
21	I/O 3	→ PTT
22	RSSI OUT	
23	EXTERNAL MIC IN	
24	AUX TX IN2	→ TX Mod
25	UNIV IO OUT	→ RX NF

Anschluß an BananaPi-Adapter

GM1200		BananaPi-Adapter (RJ45)	Funktion
4	→	1 (oder/und 4,8)	GND
8	→	3	SQL
21	→	6	PTT
24	→	5	RX NF
25	→	7	TX Mod

Ohne Garantie!